


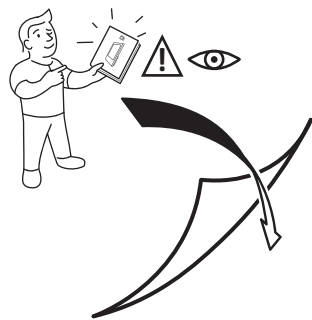
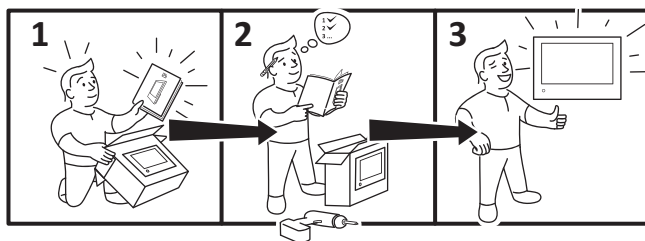
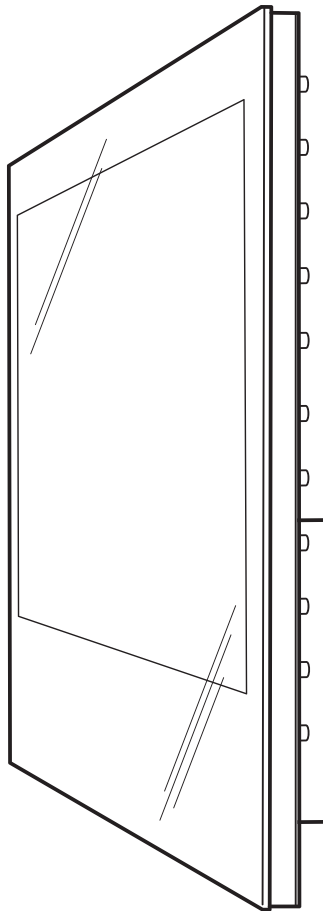
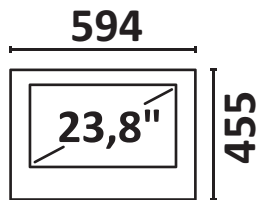
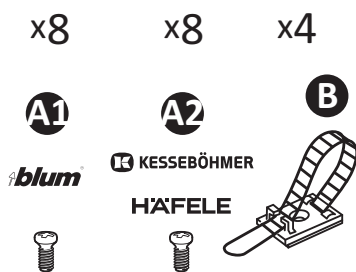
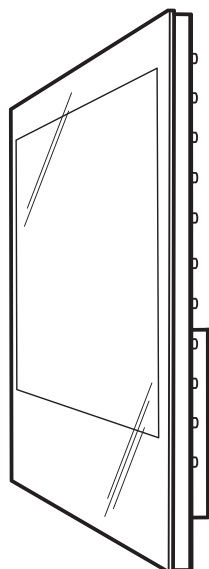
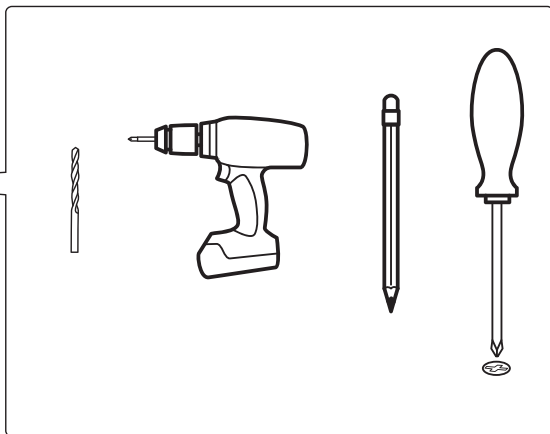


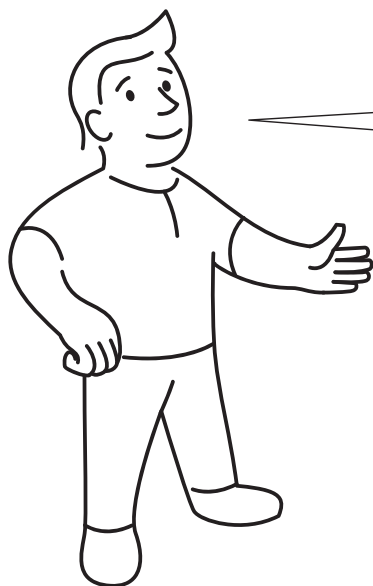

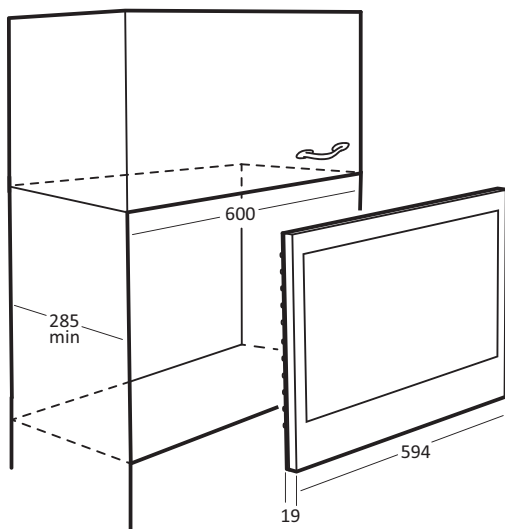


1

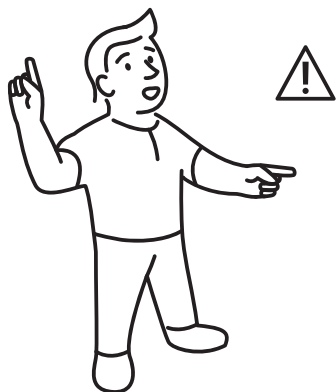

2



A

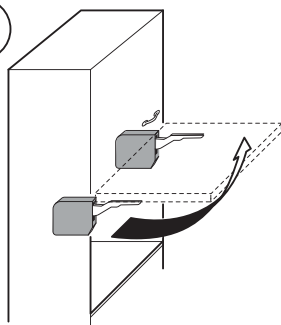

1

blum
Aventos HK29

+



2

blum
Aventos HK29-top

+




3

KESSEBÖHMER
FREEflap forte-F

HÄFELE
Free Flap 3.15 F



B

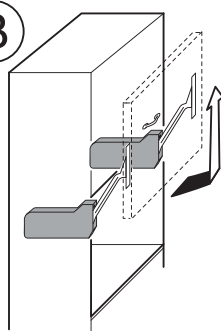

1

blum
Aventos HL27/38

+



2

KESSEBÖHMER
FREESlide Q3us





HÄFELE
Free Up Q3us






A1

 **blum**

Aventos HK29

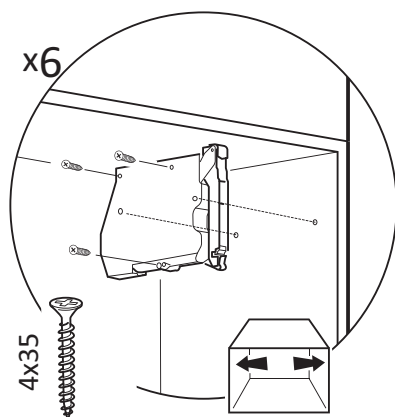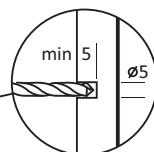
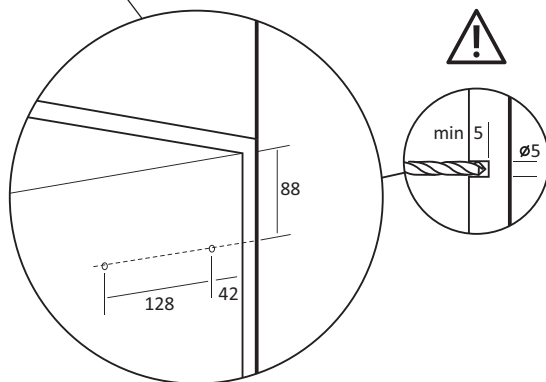
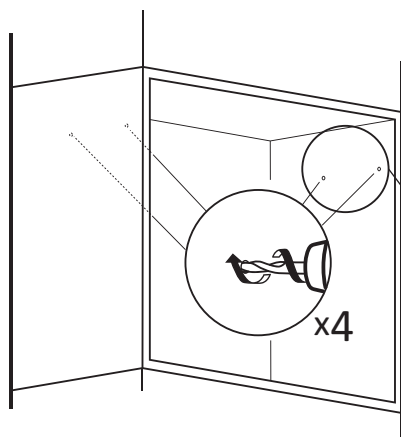


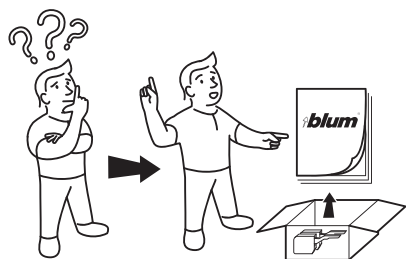
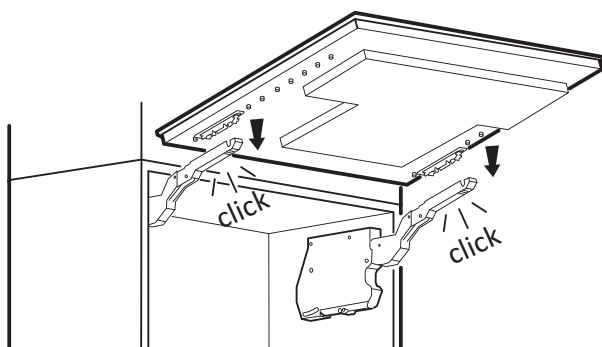
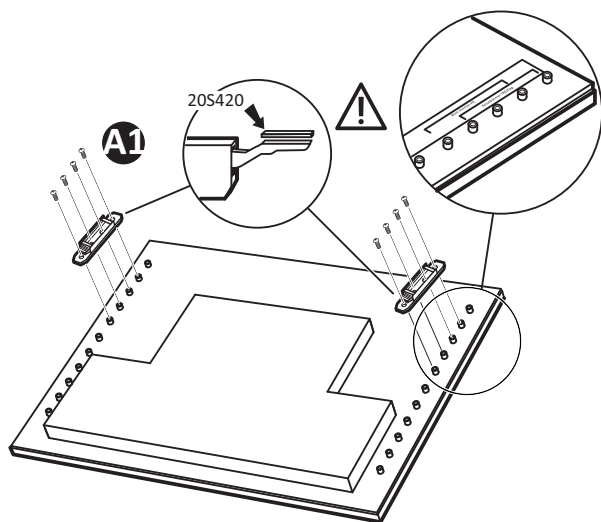


A2

blum

Aventos HK29-top

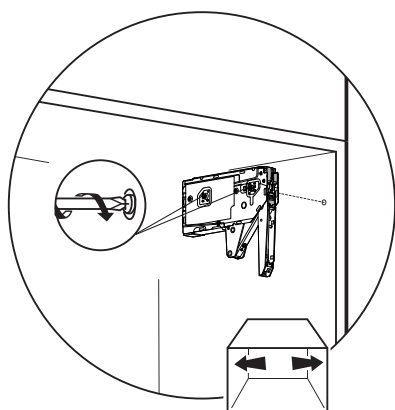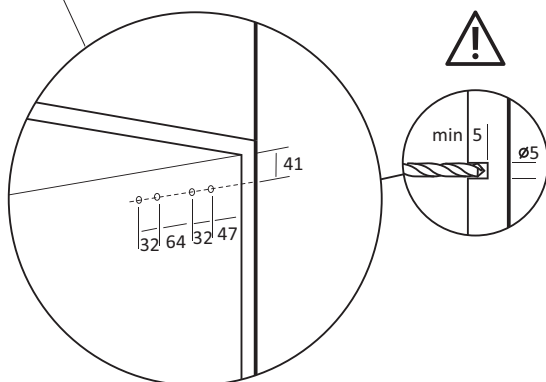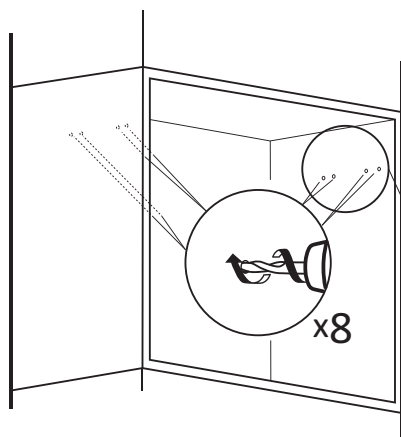


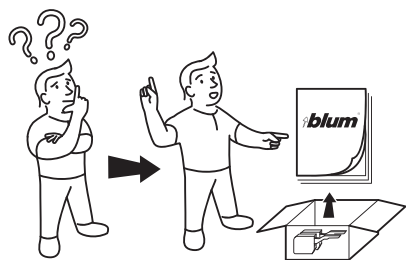
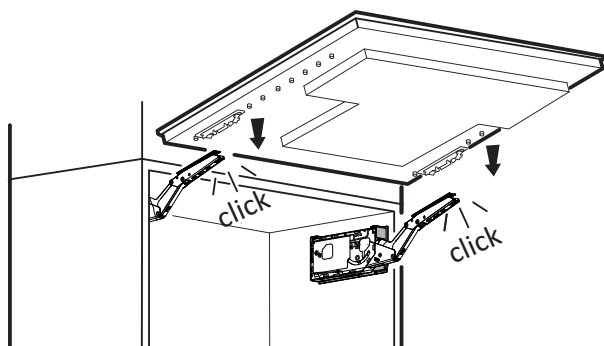
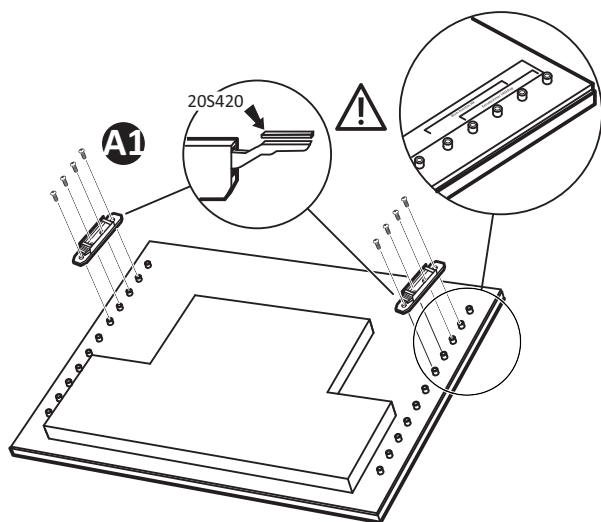


A3

KESSEBÖHMER
FREEflap forte-F

HÄFELE
Free Flap 3.15 F

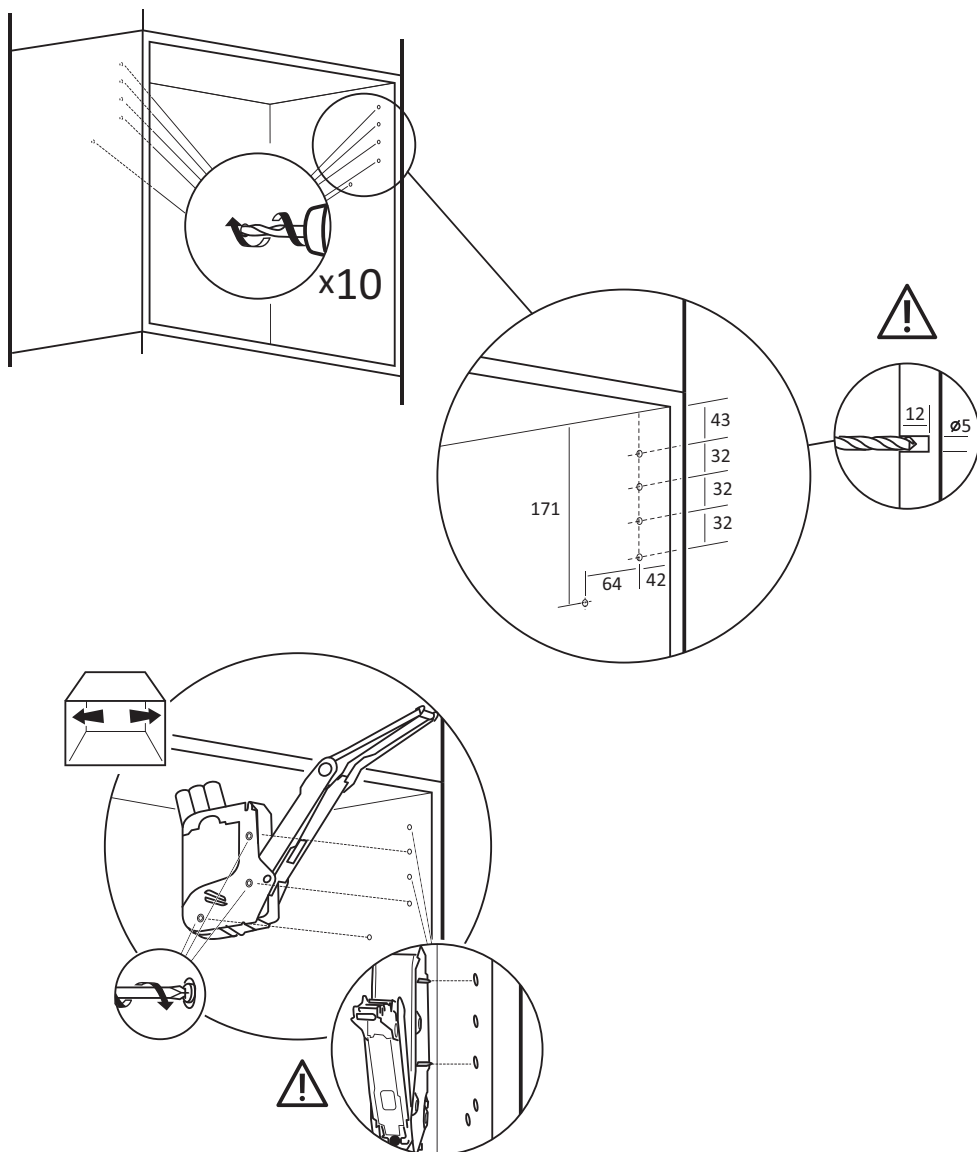



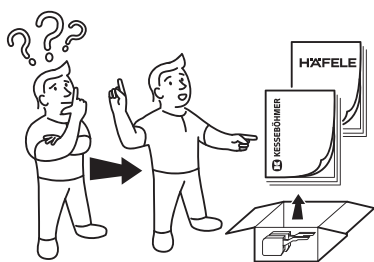
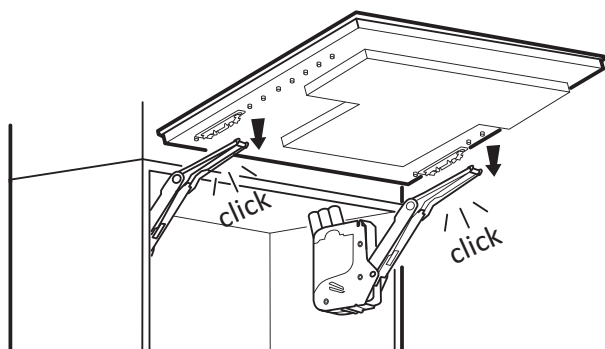
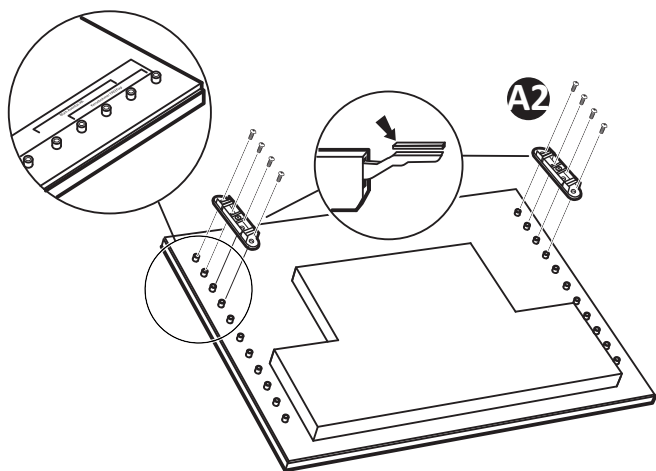


B1

 **blum**

Aventos HL27/38

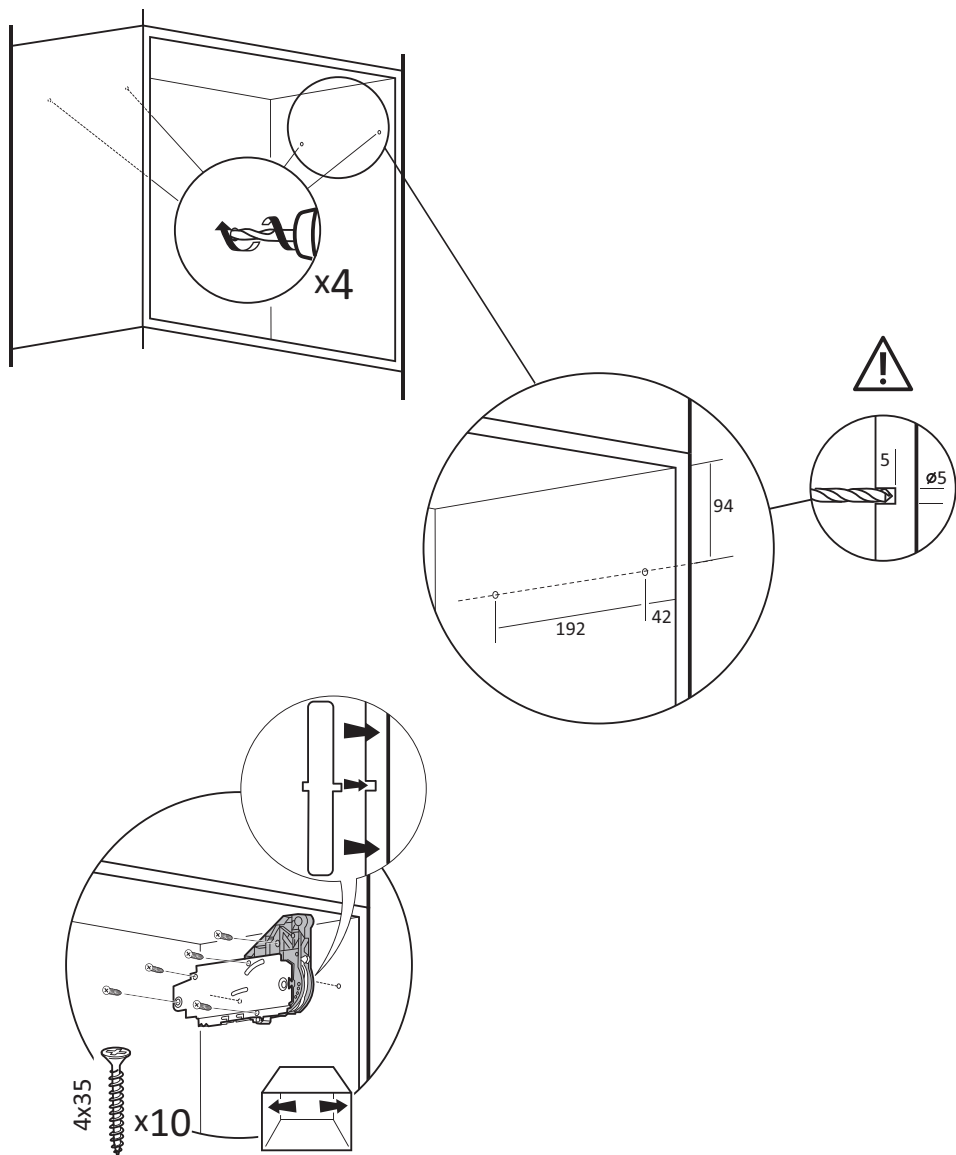


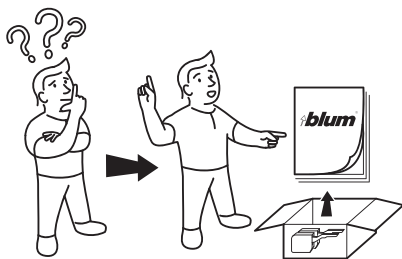
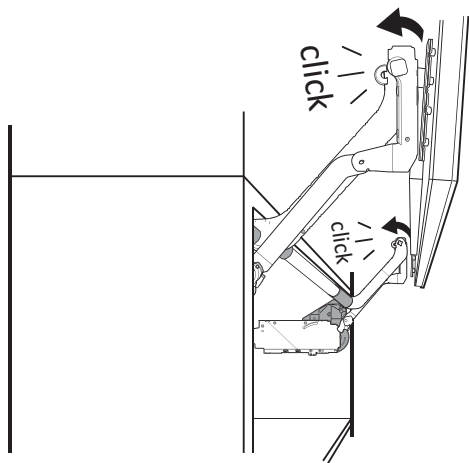
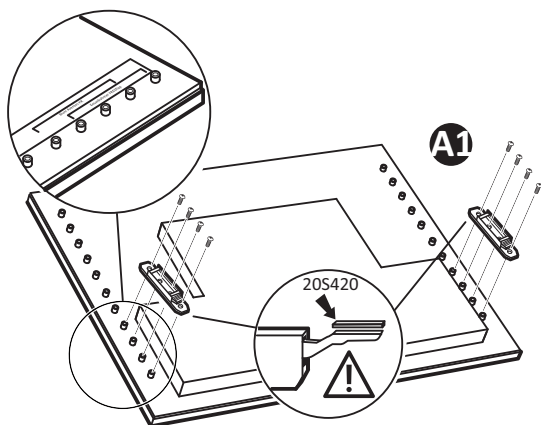
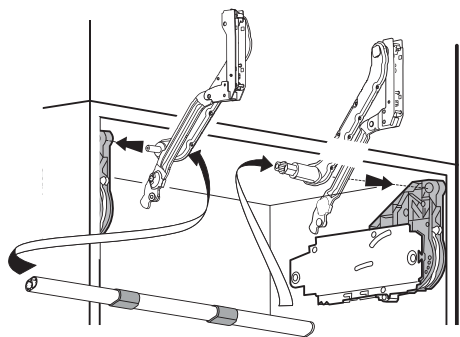


B2

KESSEBÖHMER
FREEslide Q3us

HÄFELE
Free Up Q3us

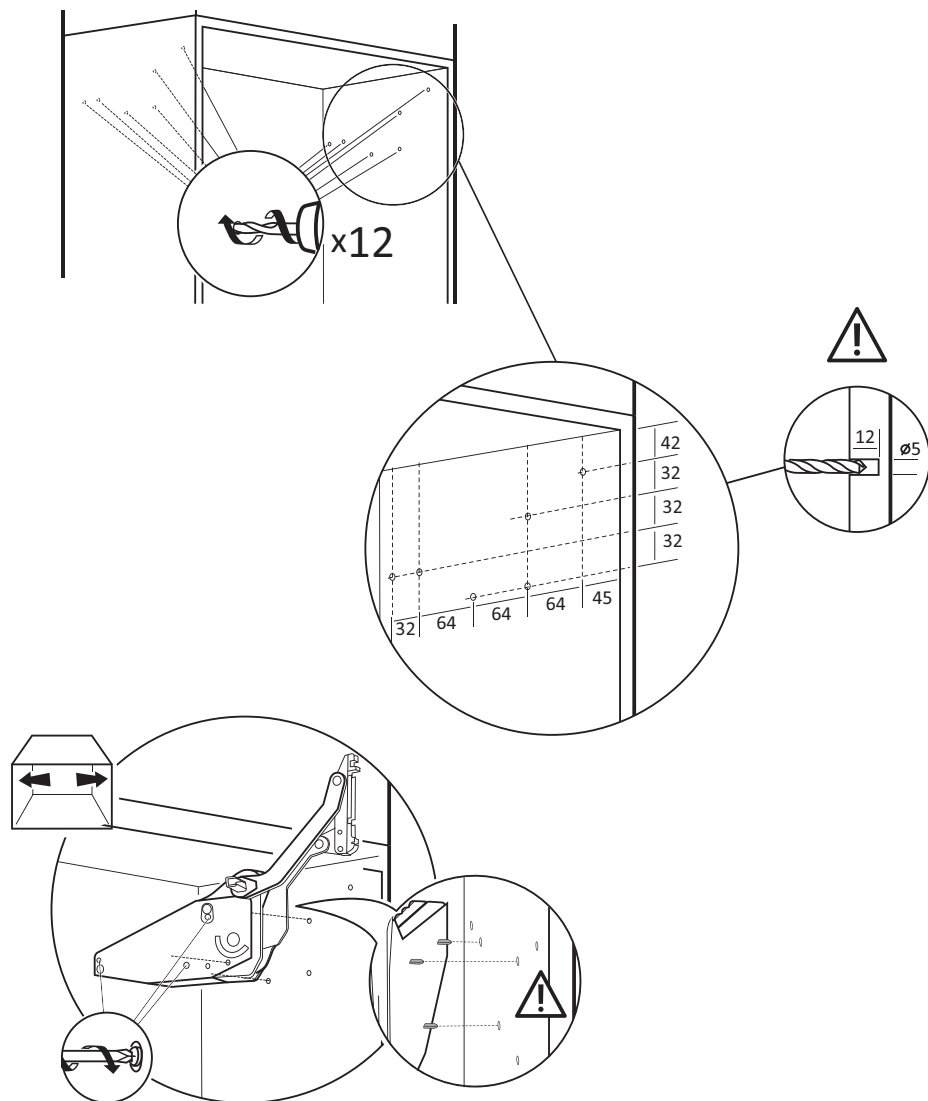


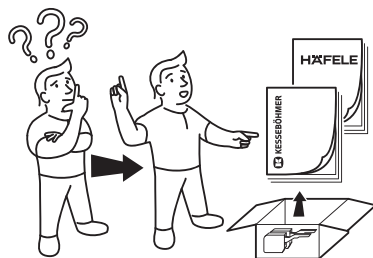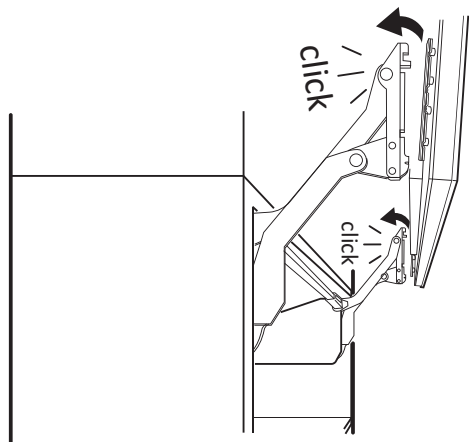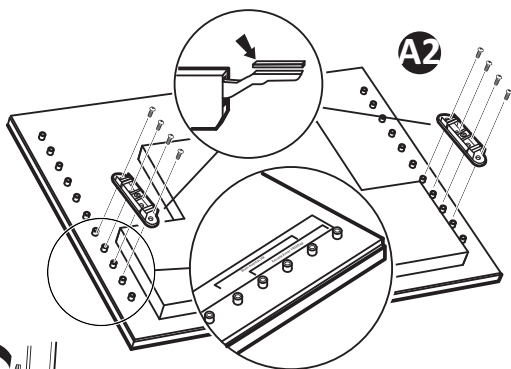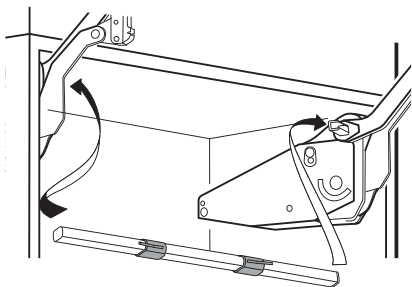


3




A

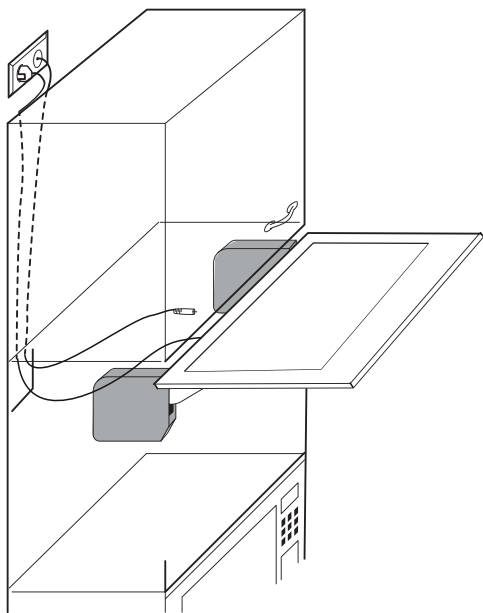



B

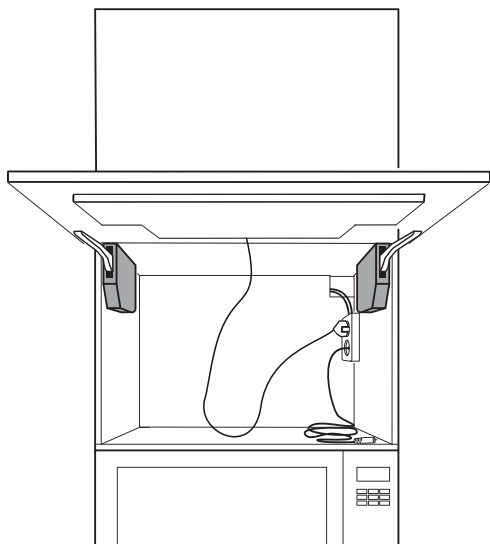



4

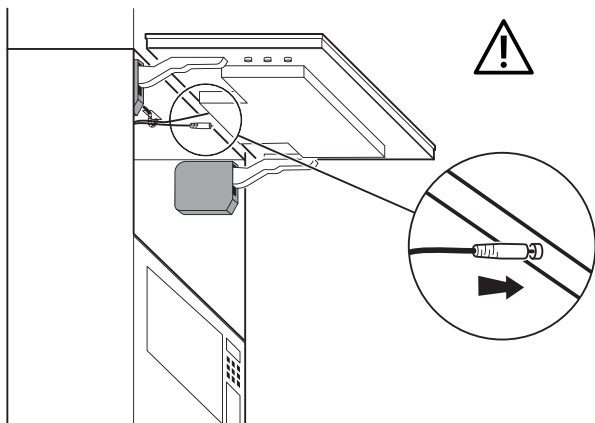

5

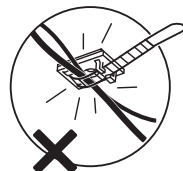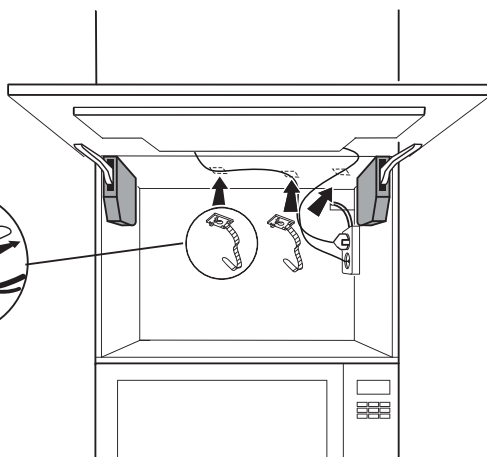

6

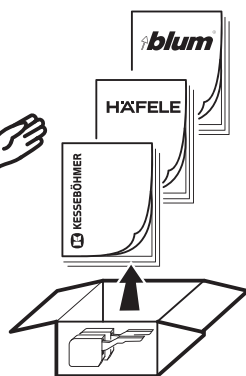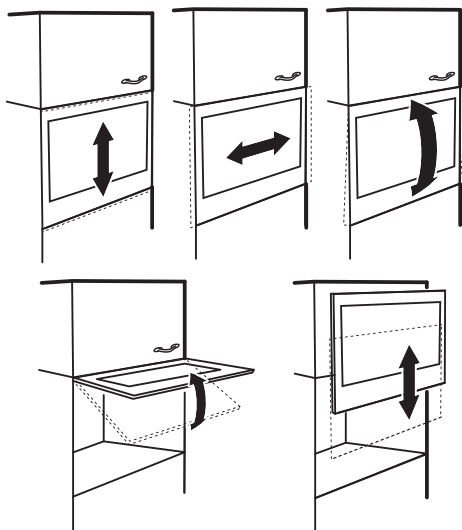

7

A

